



Quick Reference Card for the
Hypercom T7 Series Proprietary
 Retail Application on the PNS Network



SALE

Date	Time	Swipe card or key in the card number and press [ENTER].
Swipe Customer Card		
Card Type	Sale	Key in the expiration date in MMY format and press [ENTER].
Expiration Date MMY		
Card Type	Sale	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Enter Last 4 No. of Customer Card		Key in the last 4 digits of the card number and press [ENTER].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Card Type	Sale	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Card Type	Sale	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Card Type	Sale	Key in the CVV2 number from back of card and press [ENTER].
CVV2 from Card		
CVV2	0=Not Present 2=Illegibl 9=Absnt	Key in the appropriate code and press [ENTER].
Card Type	Sale	Key in the amount and press [ENTER].
Amount	\$0.00	
Card Type	Sale	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Card Type	Sale	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Card Type	Sale	Key in the cardholder's address and press [ENTER].
Enter Address		
Card Type	Sale	Key in the cardholder's ZIP Code and press [ENTER].
Enter ZIP Code		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Printing, Wait Please Wait		(No action while processing)
Card Type	Sale	Key in the P.O. number and press [ENTER].
P.O./I.D. Number		
Card Type	Sale	Key in the tax amount and press [ENTER].
Tax Amount	\$0.00	
Tax Exempt? Yes or No?		Press [YES] if tax exempt. Press [NO] if not tax exempt.
Card Type	Sale	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

AUTH ONLY

Date	Time	Press [AUTH].
Swipe Customer Card		
Enter Password	Authorize	Key in the password and press [ENTER].
Swipe Customer Card		Swipe card or key in the card number and press [ENTER].
Card Type	Authorize	Key in the expiration date in MMY format and press [ENTER].
Expiration Date MMY		
Card Type	Authorize	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Enter Last 4 No. of Customer Card		Key in the last 4 digits of the card number and press [ENTER].
Card Type	Authorize	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Card Type	Authorize	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Card Type	Authorize	Key in the CVV2 number from back of card and press [ENTER].
CVV2 from Card		
CVV2	0=Not Present 2=Illegibl 9=Absnt	Key in the appropriate code and press [ENTER].
Card Type	Authorize	Key in the amount and press [ENTER].
Amount	\$0.00	
Card Type	Authorize	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Card Type	Authorize	Key in the cardholder's address and press [ENTER].
Enter Address		
Card Type	Authorize	Key in the cardholder's ZIP Code and press [ENTER].
Enter ZIP Code		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Printing, Wait Please Wait		(No action while processing)
Card Type	Authorize	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

Shaded sections are optional features.

FORCE

Date	Time	Press [FORCE].
Swipe Customer Card		
Enter Password	Force	Key in the password and press [ENTER].
Swipe Customer Card		Swipe card or key in the card number and press [ENTER].
Card Type	Force	Key in the expiration date in MMY format and press [ENTER].
Expiration Date MMY		
Card Type	Force	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Enter Last 4 No. of Customer Card		Key in the last 4 digits of the card number and press [ENTER].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Card Type	Force	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Card Type	Force	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Card Type	Force	Key in the amount and press [ENTER].
Amount	\$0.00	
Card Type	Force	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Card Type	Force	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Card Type	Force	Key in the approval number and press [ENTER].
Enter Approval Number		
Printing, Wait Please Wait		(No action while processing)
Card Type	Force	(No action while processing)
Transaction Accepted		Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

REFUND

Date	Time	Press [REFUND].
Swipe Customer Card		
Enter Password	Refund	Key in the password and press [ENTER].
Swipe Customer Card		Swipe card or key in the card number and press [ENTER].
Card Type	Refund	Key in the expiration date in MMY format and press [ENTER].
Expiration Date MMY		
Card Type	Refund	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Enter Last 4 No. of Customer Card		Key in the last 4 digits of the card number and press [ENTER].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Card Type	Refund	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Card Type	Refund	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Card Type	Refund	Key in the amount and press [ENTER].
Amount	\$0.00	
Card Type	Refund	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Card Type	Refund	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Printing, Wait Please Wait		(No action while processing)
Card Type	Refund	(No action while processing)
Transaction Accepted		Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

Shaded sections are optional features.

SALE - MAIL ORDER/PHONE ORDER		
Date	Time	Press [FUNCTION], [65], and [ENTER].
Swipe Customer Card		
Enter Account Number	Mail Order	Key in the card number and press [ENTER].
Card Type	Mail Order	Key in the expiration date in MMY format and press [ENTER].
Expiration Date	MMYY	
Card Type	Mail Order	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Card Type	Mail Order	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Card Type	Mail Order	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Card Type	Mail Order	Key in the CVV2 number from back of card and press [ENTER].
CVV2	0=Not Present	Key in the appropriate code and press [ENTER].
2=Illegibl	9=Absnt	
Card Type	Mail Order	Key in the amount and press [ENTER].
Amount	\$0.00	
Card Type	Mail Order	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Card Type	Mail Order	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Card Type	Mail Order	Key in the cardholder's address and press [ENTER].
Enter Address		
Card Type	Mail Order	Key in the cardholder's ZIP Code and press [ENTER].
Enter ZIP Code		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Printing, Wait Please Wait		(No action while processing)
Card Type	Mail Order	Key in the P.O. number and press [ENTER].
P.O./I.D. Number		
Card Type	Mail Order	Key in the tax amount and press [ENTER].
Tax Amount	\$0.00	
Tax Exempt? Yes or No?		Press [YES] if tax exempt. Press [NO] if not tax exempt.
Card Type	Mail Order	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

DEBIT SALE		
Date	Time	Press [DEBIT].
Swipe Customer Card		
DB Sale		Swipe card.
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Debit	DB Sale	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Debit	DB Sale	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Debit	DB Sale	Key in the amount and press [ENTER].
Amount	\$0.00	
Debit	DB Sale	Key in the cash back amount and press [ENTER].
Cash Amount	\$0.00	
Debit	DB Sale	Key in the total amount and press [ENTER].
Total	\$0.00	
Debit	DB Sale	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.
Printing, Wait Please Wait		(No action while processing)
Debit	DB Sale	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

DEBIT REFUND		
Date	Time	Press [DEBIT].
Swipe Customer Card		
DB Sale		Press [REFUND].
DB Refund		Key in password and press [ENTER].
Enter Password		
DB Refund		Swipe card.
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
Debit	DB Refund	Key in the cashier number and press [ENTER].
Enter Cashier Number		
Debit	DB Refund	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
Debit	DB Refund	Key in the amount and press [ENTER].
Amount	\$0.00	
Debit	DB Refund	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
Debit	DB Refund	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.
Printing, Wait Please Wait		(No action while processing)
Debit	DB Refund	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

EBT SALE - FOOD STAMP		
Date	Time	Press [FUNCTION], [45], and [ENTER].
Swipe Customer Card		
EBT Sale		Swipe card or key in the card number and press [ENTER].
EBT	EBT Sale	Key in the expiration date in MMY format and press [ENTER].
Expiration Date	MMYY	
EBT	EBT Sale	Verify an imprint of the card was taken and press [ENTER].
Take Imprint of Card		
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
1 = Food Stamp		Press [1] and [ENTER].
2 = Cash Benefits		
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
EBT	EBT Sale	Key in the cashier number and press [ENTER].
Enter Cashier Number		
EBT	EBT Sale	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
Sign-On?	Y or N	
EBT	EBT Sale	Key in the amount and press [ENTER].
Amount	\$0.00	
EBT	EBT Sale	Key in the amount again and press [ENTER].
Amount Again	\$0.00	
EBT	EBT Sale	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Cust Ref #		
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.
Printing, Wait Please Wait		(No action while processing)
EBT	EBT Sale	(No action while processing)
Approval	XXXXXX	Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

EBT SALE - CASH BENEFIT		
Date	Time	Press [FUNCTION], [45], and [ENTER].
Swipe Customer Card		
EBT Sale Swipe card or key in the card number and press [ENTER].		
EBT Expiration Date	EBT Sale MMY Y	Key in the expiration date in MMY Y format and press [ENTER].
EBT Take Imprint of Card	EBT Sale	Verify an imprint of the card was taken and press [ENTER].
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
1 = Food Stamp		Press [2] and [ENTER].
2 = Cash Benefits		
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
EBT Enter Cashier Number	EBT Sale	Key in the cashier number and press [ENTER].
EBT Sign-On?	EBT Sale Y or N	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
EBT Amount	EBT Sale \$0.00	Key in the amount and press [ENTER].
EBT Cash Amount	EBT Sale \$0.00	Key in the cash back amount and press [ENTER].
EBT Total	EBT Sale \$0.00	Key in the total amount and press [ENTER].
EBT Enter Cust Ref #	EBT Sale	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		
Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.		
Printing, Wait Please Wait		
(No action while processing)		
EBT Approval	EBT Sale XXXXXX	(No action while processing) Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

EBT REFUND - FOOD STAMP ONLY		
Date	Time	Press [FUNCTION], [46], and [ENTER].
Swipe Customer Card		
EBT Refund Swipe card or key in the card number and press [ENTER].		
EBT Expiration Date	EBT Refund MMY Y	Key in the expiration date in MMY Y format and press [ENTER].
EBT Take Imprint of Card	EBT Refund	Verify an imprint of the card was taken and press [ENTER].
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
EBT Enter Cashier Number	EBT Refund	Key in the cashier number and press [ENTER].
EBT Sign-On?	EBT Refund Y or N	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
EBT Amount	EBT Refund \$0.00	Key in the amount and press [ENTER].
EBT Amount Again	EBT Refund \$0.00	Key in the amount again and press [ENTER].
EBT Enter Cust Ref #	EBT Refund	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		
Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.		
Printing, Wait Please Wait		
(No action while processing)		
EBT Transaction Accepted	EBT Refund	(No action while processing) Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

EBT FORCE - FOOD STAMP ONLY		
Date	Time	Press [FUNCTION], [44], and [ENTER].
Swipe Customer Card		
EBT Force Key in the password and press [ENTER].		
Enter Password		
EBT Force Swipe card or key in the card number and press [ENTER].		
EBT Expiration Date	EBT Force MMY Y	Key in the expiration date in MMY Y format and press [ENTER].
EBT Take Imprint of Card	EBT Force	Verify an imprint of the card was taken and press [ENTER].
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
Duplicate Acct Add?	Yes or No?	Press [YES] if the duplicate transaction should be processed. Press [NO] if the duplicate transaction should be cancelled.
Duplicate Acct Enter Password		Key in the password and press [ENTER].
EBT Enter Cashier Number	EBT Force	Key in the cashier number and press [ENTER].
EBT Sign-On?	EBT Force Y or N	Press [YES] to add the cashier number to the cashier table. Press [NO] to enter a different cashier number.
EBT Amount	EBT Force \$0.00	Key in the amount and press [ENTER].
EBT Amount Again	EBT Force \$0.00	Key in the amount again and press [ENTER].
EBT Enter Cust Ref #	EBT Force	Key in the customer reference number and press [ENTER] or press [ENTER] to bypass.
Enter Invoice Number		Key in the invoice number and press [ENTER] or press [ENTER] to accept terminal generated invoice number.
Waiting for PIN		
Key in the approval code and press [ENTER].		
Printing, Wait Please Wait		
(No action while processing)		
EBT Approval	EBT Force XXXXXX	(No action while processing) Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

EBT BALANCE INQUIRY - FOOD STAMP ONLY		
Date	Time	Press [FUNCTION], [75], and [ENTER].
Swipe Customer Card		
EBT BL INQ Swipe card or key in the card number and press [ENTER].		
EBT Expiration Date	EBT BL INQ MMY Y	Key in the expiration date in MMY Y format and press [ENTER].
XXXXXXXXXXXX=XXXX		If account number and expiration date are correct, press [ENTER]. If account number and expiration date are incorrect, press [CANCEL].
1 = Food Stamps		Press [1] and [ENTER] for a food stamp balance inquiry.
2 = Cash Benefits		Press [2] and [ENTER] for a cash benefits balance inquiry.
Waiting for PIN		
Key in the PIN number on the PIN pad and press [ENTER] on the PIN pad.		
Printing, Wait Please Wait		
(No action while processing)		
EBT Transaction Accepted	EBT BL INQ	(No action while processing) Receipt prints.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.

VOID		
Date	Time	Press [VOID].
Swipe Customer Card		
Void Key in the password and press [ENTER].		
Enter Password		
EBT Enter Invoice Number		
Key in the invoice number and press [ENTER].		
X Correct?	\$X.XX Yes or No	Press [YES] to void the transaction displayed. Press [NO] to cancel and return to the idle prompt.
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.
Transaction Accepted		

ADJUSTMENT		
Date	Time	Press [ADJUST].
Swipe Customer Card		
Adjust Key in the password and press [ENTER].		
Enter Password		
EBT Enter Invoice Number		
Key in the invoice number and press [ENTER].		
Total Correct?	\$X.XX Yes or No	Press [YES] to cancel and return to the idle prompt. Press [NO] to adjust the transaction amount displayed.
Total New Amount?	\$X.XX \$0.00	Key in the new transaction amount and press [ENTER].
Total Correct?	\$X.XX Yes or No	Press [YES] if new amount is correct. Press [NO] to adjust transaction amount again.
Transaction Accepted		
Press [CANCEL] to return to idle prompt.		

Shaded sections are optional features.

Shaded sections are optional features.

REPRINT		
Date	Time	Press [REPRINT].
Swipe Customer Card		
Reprint Trans	Key in the invoice number of the transaction to reprint and press [ENTER].	
Enter Invoice Number		
Print Second Receipt Correct?	Yes or No?	Press [YES] to print the customer copy or press [NO] to return to the idle prompt.
Reprint Complete	(No action)	

BATCH REVIEW		
Date	Time	Press [BATCH REVIEW].
Swipe Customer Card		
Enter Cashier Number	Review	Key in the appropriate cashier number and press [ENTER] or press [ENTER] for all cashier numbers.
CSH: XX	INV: XX	Press [←] to display additional transaction information.
<TRAN TYPE>	SX.XX	Press [ENTER] to scroll to the next transaction.
		Press [CANCEL] to return to the idle prompt.

CASHIER LOG ON/OFF		
Date	Time	Press [FUNCTION], [77], and [ENTER].
Swipe Customer Card		
Enter Cashier Number	Sign on/off	Key in the appropriate cashier number and press [ENTER].
Sign on/off?	Yes or No	Press [YES] to sign on/off cashier number displayed. Press [NO] to cancel cashier sign on/off.
Transaction Accepted		
Enter Cashier Number	Sign on/off	Key in the next cashier number or press [CANCEL] to return to the idle prompt.

CASHIER REPORT		
Date	Time	Press [REPORTS].
Swipe Customer Card		
Enter Password	Reports	Key in the password and press [ENTER].
2=Cashr	4=Summary	Press [2] and [ENTER] to access cashier report options.
3=Audit		
1=Audit		Press [1] and [ENTER] for a cashier audit report.
2=Summary		Press [2] and [ENTER] for a cashier summary report.
Enter Cashier Number	Key in the appropriate cashier number and press [ENTER] or press [ENTER] to print all cashiers.	
Scanning Batch	(No action while processing)	
Please Wait	Report prints.	

REPORTS		
Date	Time	Press [REPORTS].
Swipe Customer Card		
Enter Password	Reports	Key in the password and press [ENTER].
2=Cashr	4=Summary	Press [3] and [ENTER] to print an audit report.
3=Audit		Press [4] and [ENTER] to print a summary report.
Scanning Batch	(No action while processing)	
Please Wait	Report prints.	

SETTLEMENT		
Date	Time	Press [SETTLEMENT].
Swipe Customer Card		
Enter Password	Settle	Key in the password and press [ENTER].
Sales Total Correct?	SX.XX Yes or No	Press [YES] if the sales total is correct. Press [NO] if the sales total is incorrect.
Refund Total Correct?	SX.XX Yes or No	Press [YES] if the refund total is correct. Press [NO] if the refund total is incorrect.
Settle	(No action while processing)	
Batch Transfer, Wait		
OK XXX XXXX XXXX	Report prints.	

AVS RESPONSE CODES	
VISA	DESCRIPTION
Y	Yes - Exact match on address and ZIP Code.
A	Address matches, ZIP Code does not.
Z	ZIP Code matches, address does not.
N	Neither address nor ZIP Code match.
U	Address information unavailable, or issuer does not support AVS.
R	Retry - Issuer's system unavailable or timed out.
E	Error - Transaction ineligible for AVS or edit error found.
S	AVS not supported by issuer.

AMERICAN EXPRESS	
DISCOVER	DESCRIPTION
Y	Yes - Exact match on address and ZIP Code.
A	Address matches, ZIP Code does not.
Z	ZIP Code matches, address does not.
N	Neither address nor ZIP Code match.
U	Address information unavailable, or issuer does not support AVS.
R	Retry - Issuer's system unavailable or timed out.
S	AVS not supported by issuer.

MASTERCARD	
DISCOVER	DESCRIPTION
X	Exact - Match on address and 9-digit ZIP Code.
Y	Yes - Exact match on address and ZIP Code.
A	Address matches, ZIP Code does not.
W	Whole - 9-digit ZIP Code matches, address does not.
Z	ZIP Code matches, address does not.
N	Neither address nor ZIP Code match.
U	Address information unavailable, or issuer does not support AVS.
R	Retry - Issuer's system unavailable or timed out.
S	AVS not supported by issuer.

AVS CODES CONTINUED	
DISCOVER	DESCRIPTION
Y	Yes - Exact match on address and ZIP Code.
A	Address matches, ZIP Code does not.
W	Whole - 9-digit ZIP Code matches, address does not.
Z	ZIP Code matches, address does not.
N	Neither address nor ZIP Code match.
U	Address information unavailable, or issuer does not support AVS.

